


PERFORATING PRESS PIN REMOVAL INSTRUCTIONS

- 1 Depress the lever, turn press upside down and using a coin or similar remove the thumbscrew from the base of the press;

- 2 Slide the L shaped assembly forward out of the dovetail and clear of the press body;

L shaped assembly →


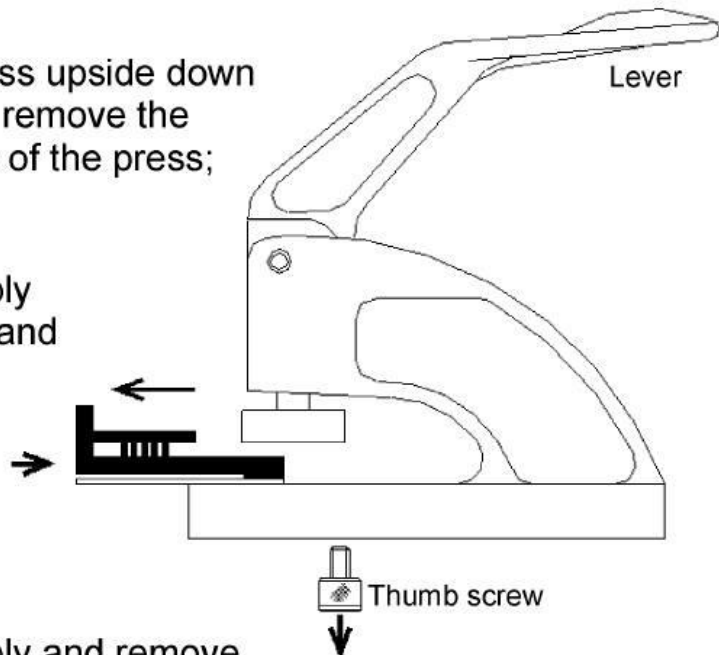


- 3 Lift pin holder from assembly and remove pins from the pin holder until the desired configuration is achieved;

- 4 Replace pin holder into the assembly ensuring that the pin heads are flush;



- 5 Slide assembly back into press ensuring pin holder is properly located into the aluminium dovetail;

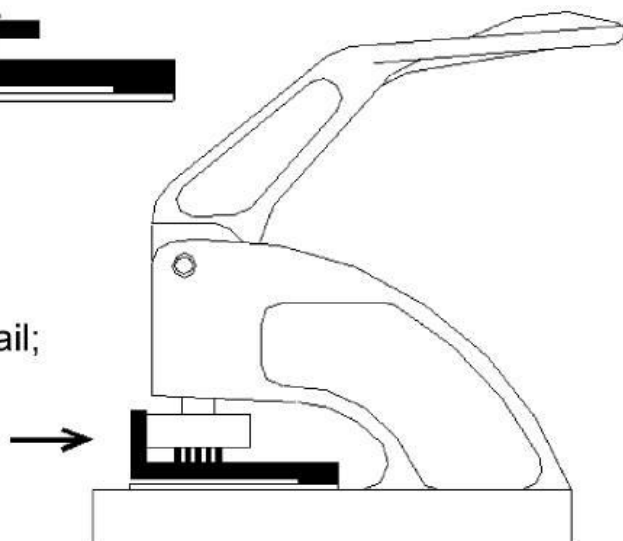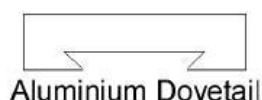

- 6 Turn the press upside down and depress the lever to secure the assembly. Using a coin or similar tighten the thumbscrew.
Caution DO NOT OVER TIGHTEN